



**Basis**  
Außendurchmesser  
(am Stuhlfuß montiert - weiß, schwarz oder alufarbig)

**Einsatz**  
Außendurchmesser  
(für Ihr Basisteil)

**Produkte**  
(die dazu passen)



Fina-46 (Filz)  
Flora-46 (Filz)  
Karla-50 (Kunststoff)  
Kaja-50 (Kunststoff)





Fina-37 (Filz)  
Flora-37 (Filz)  
Karla-40 (Kunststoff)  
Kaja-40 (Kunststoff)




Fina-28 (Filz)  
Flora-28 (Filz)  
Karla-30 (Kunststoff)  
Kaja-30 (Kunststoff)



Fina-23 (Filz)  
Flora-23 (Filz)  
Karla-25 (Kunststoff)  
Kaja-25 (Kunststoff)  
Jana-25 (Kunststoff)

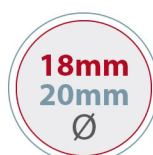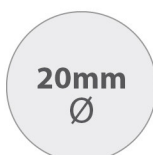

Fina-18 (Filz)  
Flora-18 (Filz)  
Karla-20 (Kunststoff)  
Kaja-20 (Kunststoff)  
Jana-20 (Kunststoff)



Fina-17 (Filz)  
Flora-17 (Filz)  
Karla-17 (Kunststoff)  
Kaja-17 (Kunststoff)

... ganz einfach messen!

Ihr Filzgleiter - Lineal

**WICHTIG:** Die **Kunststoffseite** des Filzgleiters **muss** nach unten zeigen.  
Die **Gleitfläche** des Kunststoffgleiters **muss** nach unten zeigen.

